Installation Instructions:

Drywall ceiling:

At desired location, drill a 3/16" hole approximately 3/4" deep. Insert cone shaped anchor into hole and tap in with a hammer. Screw hook into anchor. Hang the loop, which is tied in the rope, onto the hook. See figure 1.

Wood beam running between cars (in ideal location):

At desired location, screw hook directly into beam. Hang the loop, which is tied in the rope, onto the hook. See figure 1.

Wood beams running over cars (not in ideal location):

At desired location, lay rope over the two beams nearest to the area between the cars. Slip the untied end of the rope through the loop which is tied in the rope. Pull rope tight. Adjust location by rotating the loop that is cinched around the two beams. See figure 2.

Tie the Door Guard onto the ropes at a height that both vehicles are protected when doors are opened. Cut off excess rope.

Figure 1

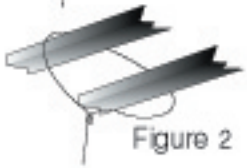

Figure 2

Auto Care Products, Inc., San Diego, California

7 63636 20020 5